

Engine Prime

Keyboard Shortcuts

Utility

Function	Mac	Windows	Explanation
Tool Tips	⌘ (Command) + T	Ctrl + T	Shows relevant information about a feature when moused over.
Open Preferences	⌘ + ,	Ctrl + ,	Opens the Preferences window.
Cancel / Close Menu	Esc	Esc	Cancels the current action or closes a menu.
Full Screen	⌘ + Control + F	F11	Sets the application to full screen mode.
Quit Application	⌘ + Q	Alt + F4	Quits Engine Prime.

Navigation

Function	Mac	Windows	Explanation
Place Cursor in Search Field	⌘ + F	Ctrl + F	Moves your cursor to the search field. Use your computer keyboard to enter text into the field.
Cycle Between Collection Pane	Option + Tab	Ctrl + Tab	Cycles between the different areas in the Collection pane—Crates, Playlists, iTunes, Serato, and File Browser.
Waveform Zoom In	⌘ + Plus (+)	Ctrl + Plus (+)	Zooms in both Layers' waveforms.
Waveform Zoom Out	⌘ + Minus (-)	Ctrl + Minus (-)	Zooms out both Layers' waveforms.
Waveform Zoom Reset	⌘ + 0	Ctrl + 0	Resets both Layers' waveforms to their default level.
New Crate / Playlist	⌘ + N	Ctrl + N	Creates a new top-level crate or playlist.
Show / Hide Devices Panel	⌘ + D	Ctrl + D	Opens or closes the Devices panel.
Navigate Track/Tree List Up / Down	↑/↓ (Up/Down)	↑/↓ (Up/Down)	Navigate up and down the Track List or Tree List.
Expand / Collapse Crates & Folders	←/→ (Left/Right)	←/→ (Left/Right)	Expands or collapses crates or folders that contain sub-crates or sub-folders.
Navigate Area Next	Tab	Tab	Switches the focus to the next open panel.
Navigate Area Previous	Shift + Tab	Shift + Tab	Switches the focus to the previous open panel.
Show / Hide Filter Boxes	F	F	Opens or closes the Filter Boxes.
Select All Tracks	⌘ + A	Ctrl + A	Selects all tracks displayed in the track list.
Select Multiple Tracks	Shift + ↑/↓ (Up/Down)	Shift + ↑/↓ (Up/Down)	Selects multiple tracks.

Transport

Function	Layer	Mac	Windows	Explanation
Load Track	A	⌘ + 1	Ctrl + 1	Loads the selected track to the respective deck.
	B	⌘ + 2	Ctrl + 2	
Cue	A	C	C	Sets the initial Cue Point at the current playhead position.
	B	Option + C	Alt + C	
Play / Pause	A	Spacebar	Spacebar	Plays and pauses the deck.
	B	Option + Spacebar	Ctrl + Spacebar	
Beat Jump Back	A	⌘ + ← (Left)	Ctrl + ← (Left)	Skips the playhead backwards by the selected number of beats.
	B	⌘ + Option + ←	Ctrl + Alt + ←	
Beat Jump Forward	A	⌘ + → (Right)	Ctrl + → (Right)	Skips the playhead forward by the selected number of beats.
	B	⌘ + Option + →	Ctrl + Alt + →	
Previous Track	A	⌘ + ↑ (Up)	Ctrl + ↑ (Up)	Loads the previous track in the track list, or restarts a currently playing track.
	B	⌘ + Option + ↑	Ctrl + Alt + ↑	
Next Track	A	⌘ + ↓ (Down)	Ctrl + ↓ (Down)	Loads the next track in the track list.
	B	⌘ + Option + ↓	Ctrl + Alt + ↓	

Playback

Function	Layer	Mac	Windows	Explanation
Elapsed / Remaining Time	Both	T	T	Switches the Time Counter between Elapsed and Remaining time.
Sync	Both	S	S	Automatically matches the BPM and phase of the decks to each other.
Sync Off	Both	Shift + S	Shift + S	Turns Sync off.
Keylock	A	K	K	Allows for the track to be played in the original key regardless of speed.
	B	Option + K	Alt + K	
Store / Trigger Performance Pad (1–8)	A	1–8	1–8	Stores or triggers a Hot Cue or Loop, depending on the currently selected mode.
	B	Option + 1–8	Alt + 1–8	
Delete Performance Pad (1–8)	A	Shift + 1–8	Shift + 1–8	Deletes an existing Hot Cue or Loop.
	B	Option + Shift + 1–8	Alt + Shift + 1–8	
Hot Cues Edit Mode	A	⌘ + K	Ctrl + K	Sets the Performance Pads to Hot Cue Mode.
	B	⌘ + K	Ctrl + Alt + K	
Loops Edit Mode	A	⌘ + L	Ctrl + L	Sets the Performance Pads to Loop Mode.
	B	Option + L	Ctrl + Alt + L	
Set Grid Marker	A	M	M	Sets a custom grid marker.
	B	Option + M	Alt + M	
Delete Grid Marker	A	Shift + M	Shift + M	Deletes a custom grid marker within a few beats.
	B	Option + Shift + M	Alt + Shift + M	